# 7.1 Configure WIFI

The specifics for configuring WIFI will vary based on the device and network environment. However, the end result is the device must be able to reach the WMDM web service for the application to be able to communicate with NAV.

For testing purposes if your device can reach the WMDM web service using Internet Explorer your WIFI can be considered working.

The following steps for configuring are based on a DataLogic Skorpio X3 but will likely be similar for other models.


1. Open WIFI configuration tool (Summit Client Utility)
   a. Start → Settings → Connections → SCU




2. Click the "Profile" tab




3. Press the "Scan" button
4. Choose the SSID you wish to connect to

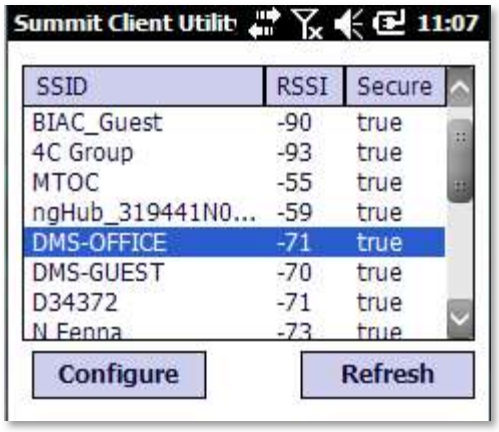


5. Press "Configure"
6. Press "Yes" to accept the creation of a new profile




7. Enter the WIFI access code and press "OK"
8. Change any other details if required on the newly created profile




9. Click the "Main" tab and press "Yes" to commit your changes




10. Set the “Active Profile” to the newly created Profile




11. Press “OK” to close